

*Sleek new styling coupled with the latest banner technology makes the Blade lightweight, portable and very easy to use.*




## features & benefits

- New styling
- High specification finish including cast chrome metal end plates
- Access roller via flip-top lid
- Removable self-locking graphic roller mechanism
- Quick change graphic slider
- Adjustable feet on base, useful for example on uneven floors
- Premium carry bag
- Available in 800 and 1000mm widths
- Increased internal housing for thicker graphics (up to 450 microns\*)
- Fixed height bungee pole

**\*Please test your substrate suitability before use**



**Universal grippa/  
self-adhesive  
top rail**

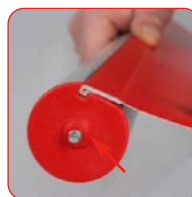

**Slide-in Graphic**



**3 piece corded  
Bungee pole**



**Tensioner built into  
roller mechanism**



### hardware specifications

Hardware Dimensions (mm):  
2175 (h) x 845 (w) x 220 (d) approx.  
Base Dimensions (mm):  
75 (h) x 845 (w) x 220 (d) approx.  
Weight:  
3.5kg approx (including carry bag)  
(800mm wide unit)

### graphic specifications

Visible Graphic Dimensions (mm):  
2120 (h) x 800 or 1000 (w) approx  
Substrate: Add 300mm to base of  
graphic to allow for roller mechanism  
Recommended material thickness  
225 - 450 microns

### additional info

Availability:  
Anodised Silver  
Included in kit:  
Base, Bungee pole,  
Universal grippa/self-adhesive  
top rail and Carry bag


# Assembly Instructions

## Banner stand assembly




### Kit includes:


Base, Bungee pole,  
Universal grippa/self-adhesive  
top rail and Carry bag

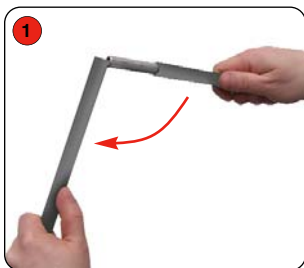


1 Open up and assemble the bungee pole.

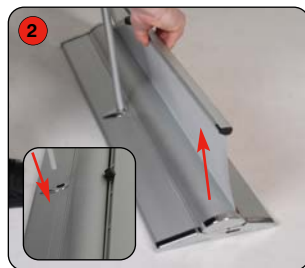

2 Insert the pole into the base. Lift the top rail to raise the graphic from the base.

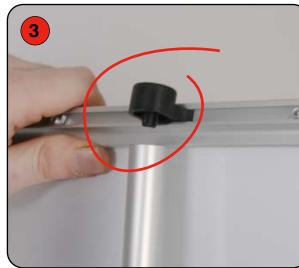


3 Secure the graphic into position by locating the top rail onto the bungee pole.

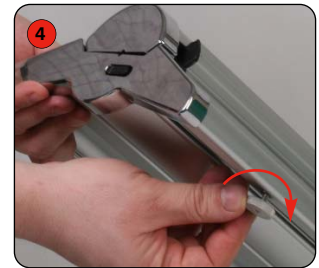


4 If required rotate the adjustable feet underneath the base.

**Important: Hold the top rail whilst lowering the banner to prevent damage to the graphic. (do not drop)**


## Graphic attachment - Adhesive rail option

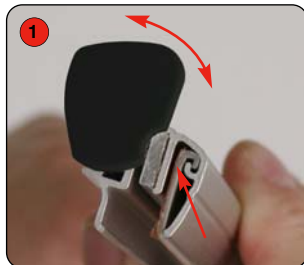

1 Rotate the rail end cap to expose the plastic adhesive rail insert.

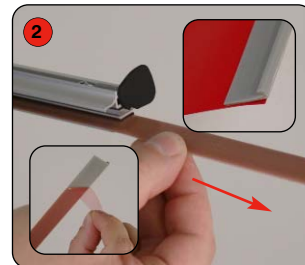


2 Slide the rail insert from the top rail. Adhere the insert to the front of the graphic.

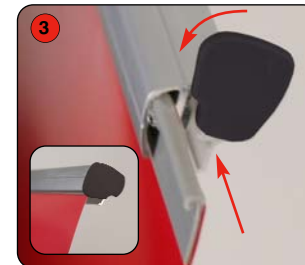


3 Slide the rail insert and graphic into the top rail. Close the rail end cap.


## Graphic attachment - Grippa rail option (ideal for textiles and PVC)

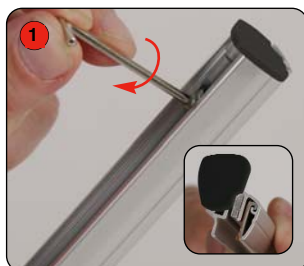


1 Using the Allen key stored in the base, loosen the top rail screws. Rotate the rail end cap to expose the steel flat bar.

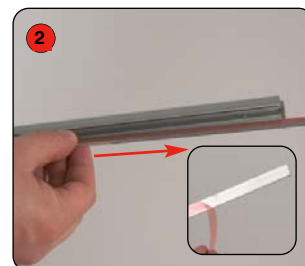

2 Slide the flat bar from the top rail and remove the backing paper.

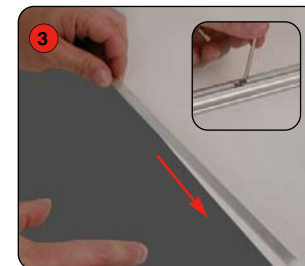


3 Adhere the flat bar to the back of the graphic. Slide the flat bar and graphic into the top rail. Tighten the screws to secure the top rail. Close the rail end cap.

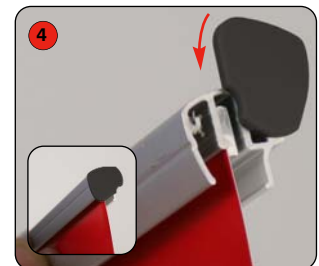


**WARNING: Do not open the base lid without first checking to ensure the locking pin is in place.**


### Graphic attachment - Base

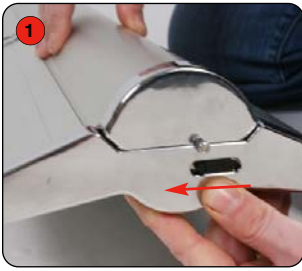


Slide the latches on either side of the base towards the back of the unit.

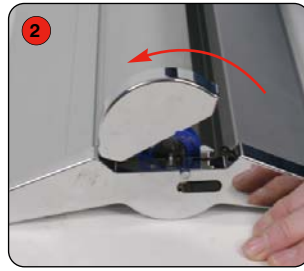


Rotate the lid to expose the roller mechanism.

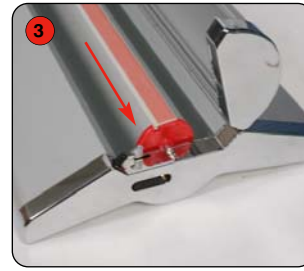


Slide the plastic insert strip off the roller mechanism.

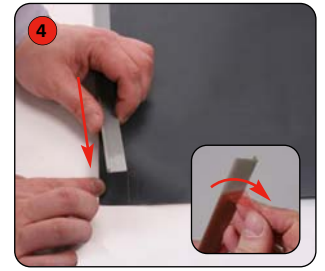


Adhere the insert strip to the back of the graphic.

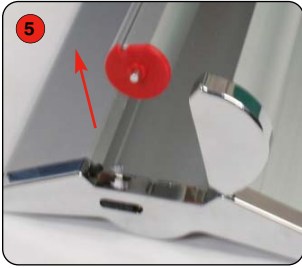


Lift out the roller mechanism.

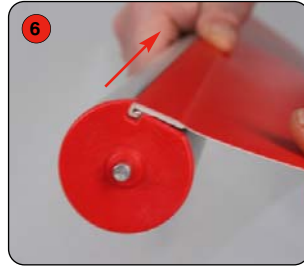

Slide the insert strip/graphic onto the roller mechanism.

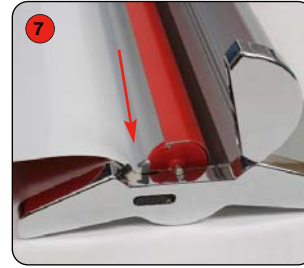


Fit the roller mechanism and graphic into the base.  
**Note position of the graphic.**

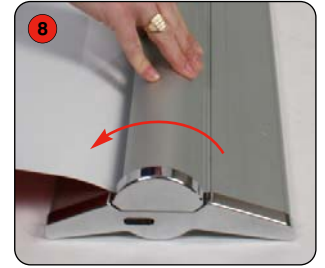


Close the lid.



Remove the locking pin at opposite end of base **whilst holding the graphic.**

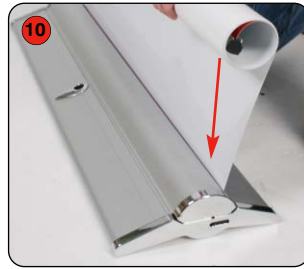

Gently allow the graphic to retract into the base.  
**Do not drop to prevent damage to the graphic.**

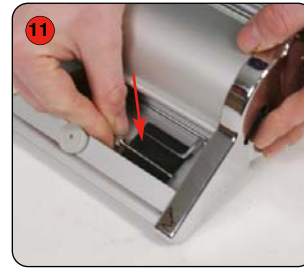

Place the locking pin into the storage area on the underneath of the base.




Banner is now ready for use.

**WARNING: Always attach graphic to base and top rail correctly before removing the locking pin.**


### Re-tensioning the roller mechanism



Slide the latches on either side of the base towards the back of the unit.

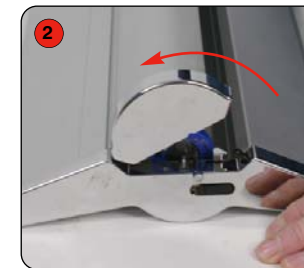

Rotate the lid to expose the roller mechanism.

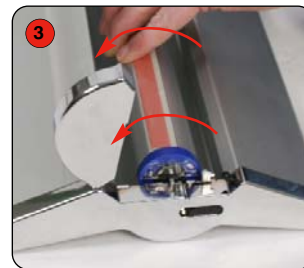

If required remove the graphic from the roller. Rotate the roller towards the back of the base. 30 turns are required to fully re-tension the roller.



Fit the locking pin into the roller and close the lid.

After fitting, graphic should be left for 24 hours before use to ensure the adhesive bonds sufficiently.